

CLASS I & II

Product Features

- Medical & I.T.E. safety approvals
- 2 MOPP input to output isolation
- Leakage current: $\leq 100\mu\text{A}$
- Efficiency up to 94%
- $\leq 0.5\text{W}$ standby power
- Up to 5,000m operating altitude

320W CONVECTION
COOLED



500W FAN
COOLED



Models & Ratings

Model Number	Voltage (V) ^(*1)	Current at convection (A)	Rated Power (W)	Ripple & Noise (max) ^(*2)	Voltage Tolerance	Line & Load Regulation	Efficiency (Average)	Start Up Delay
UES500-XXXXYYSPAZ-OP ^(*3)	12.0	26.66	319.92	150mVpk-pk	±5%	Line: ±1% Load: ±5%	92.0%	≤3s
	15.0	21.33	319.95	150mVpk-pk	±5%		92.0%	≤3s
	18.0	17.77	319.86	150mVpk-pk	±5%		92.0%	≤3s
	19.0	16.84	319.96	200mVpk-pk	±5%		93.0%	≤3s
	24.0	13.33	319.92	200mVpk-pk	±5%		93.0%	≤3s
	36.0	8.88	319.68	300mVpk-pk	±5%		93.0%	≤3s
	48.0	6.66	319.68	300mVpk-pk	±5%		94.0%	≤3s
	54.0	5.92	319.68	300mVpk-pk	±5%		94.0%	≤3s
Model Number	Voltage (V)	Current at 25 CFM (A)	Rated Power (W)	Ripple & Noise (max)	Voltage Tolerance	Line & Load Regulation	Efficiency (Average)	Start Up Delay
UES500-XXXXYYSPAZ-OPC ^(*4) UES500-XXXXYYSPAZ-OPTF ^(*5) UES500-XXXXYYSPAZ-OPSF ^(*6)	12.0	41.66	499.92	150mVpk-pk	±5%	Line: ±1% Load: ±5%	92.0%	≤3s
	15.0	33.33	499.95	150mVpk-pk	±5%		92.0%	≤3s
	18.0	27.77	499.86	150mVpk-pk	±5%		92.0%	≤3s
	19.0	26.31	499.89	200mVpk-pk	±5%		93.0%	≤3s
	24.0	20.83	499.92	200mVpk-pk	±5%		93.0%	≤3s
	36.0	13.88	499.68	300mVpk-pk	±5%		93.0%	≤3s
	48.0	10.41	499.68	300mVpk-pk	±5%		94.0%	≤3s
	54.0	9.25	499.50	300mVpk-pk	±5%		94.0%	≤3s
Standby Power	5.0	0.60	3.0	120mVpk-pk				
FAN	12.0	0.50	6.0					

Notes

(*1) Other options are available, please contact our sales representative for details.

(*2) Measured at output connector with 20MHz bandwidth and 0.1uF ceramic in parallel with 47uF electrolytic capacitors.

(*3) "Z" represents "1" or "2": "1" refers to the CLASS II standard, used for 2PIN input; "2" refers to the CLASS I standard, used for 3PIN input.

(*4) "-OPC" represents Enclosed type with external separate fan.

(*5) "-OPTF" represents Enclosed type with fan on the top.

(*6) "-OPSF" represents Enclosed type with fan on the side.

Input

Input Voltage Range	80-264VAC(80-115VAC refer to derating curve)
Frequency Range	47-63Hz
Input Current	6.3A max
Inrush Current	120A max at 240VAC cold start
Touch Leakage Current ^(max)	≤100μA at 264VAC

Environmental

Operating Temperature	-30°C to 70°C(30°C to 70°C refer to derating curve)	Dimensions	127.0(L)x76.2(W)x41.0(H)mm 5x3"
Storage Temperature	-40°C to 80°C	Power supply power density	0.806W/cm ³
Operating Humidity	5% to 90% RH, non-condensing	Weight	480g
Storage Humidity	5% to 95% RH	MTBF	>1000,000hrs Telcordia_SR-332 at 25°C
Operating Altitude	5,000m		

General

Protection

Overload	120-160% rated output power, auto recovery
Over Voltage	110-130% rated output voltage input to reset
Short Circuit	Trip and restart (hiccup mode)

Safety Approvals

Safety Agency / Mark	Medical(meet)	ITE(meet)
CB	IEC60601-1	IEC62368-1
TUV-Mark	EN60601-1	-
NRTL	ANSI/AAMI ES60601-1 CAN/CSA-C22.2 NO. 60601-1	UL62368-1

EMC

Emission	Medical	ITE
Conduction (*1)	IEC/EN60601-1-2,CISPR 11	EN55032, CISPR 32
Radiation (*2)	IEC/EN60601-1-2,CISPR 11	EN55032, CISPR 32
Harmonic Currents	EN61000-3-2, Class A	EN61000-3-2, Class A
Voltage Flicker	EN61000-3-3	EN61000-3-3
Immunity	IEC/EN60601-1-2	EN55035, CISPR 35
ESD	IEC61000-4-2 ±15KV air, ±8KV contact	
Radiated Immunity	IEC61000-4-3 10V/m ,3V/m 80MHz - 2.7GMHz	
EFT/Burst	IEC61000-4-4 ±2KV on AC port, ±1KV on signal ports	
Surge	IEC61000-4-5 ±2KV line - line ,±4KV line - earth	
Conducted Immunity	IEC61000-4-6 3Vrms, 6Vrms (0.15MHz-80MHz)	
Magnetic Field	IEC61000-4-8 30 A/m	
Dips & Interruptions	IEC61000-4-11 0%, 70%, 0% of UT	

NOTE:

The power supply is considered a component which will be installed into a final equipment. All EMC tests are executed by mounting the unit on a 360mm*360mm metal plate with 1mm of thickness. The final equipment must be re-confirmed that it still meets EMC directives.

Others

Dielectric Withstand Voltage	4000VAC input to output
Insulation Resistance	100M Ohms, 500VDC input to output


Notes

(*1) Class I meets Class B,Class II meets Class A.


(*2) Class I meets Class A,Class II meets Class A.



Block Diagram

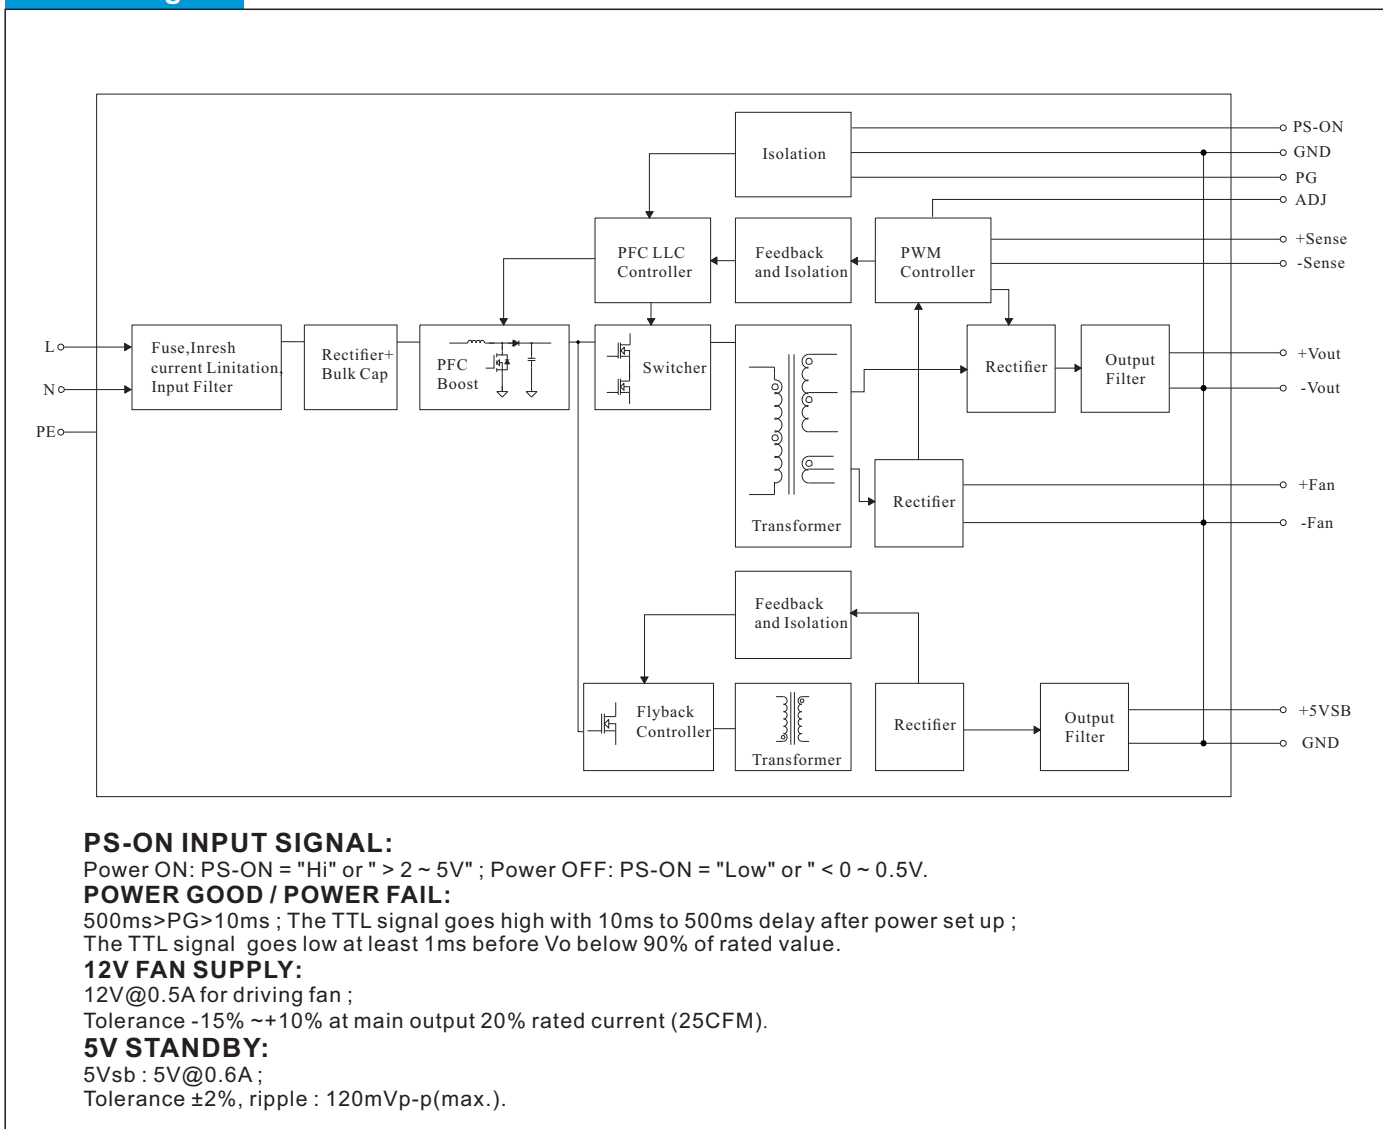

Derating Curve

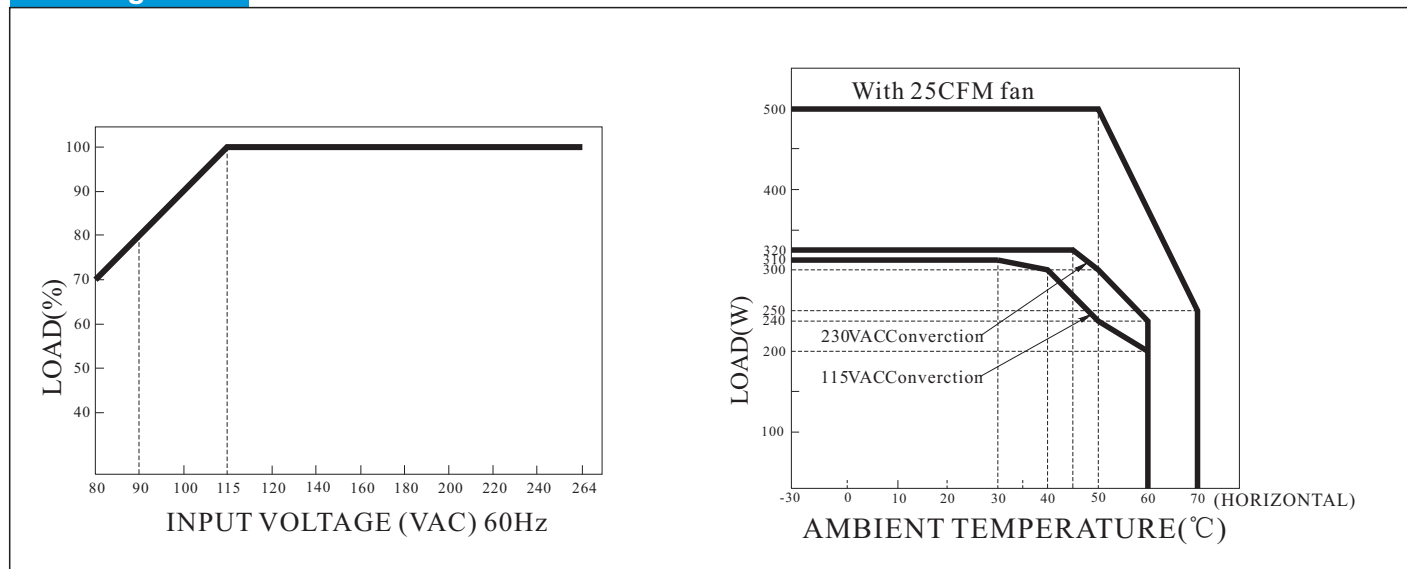




UE Electronic

Switching Power Supply
Open Frame Style

Universal 500 Watt - UES500-XXXYYYYSPAZ-OP

Mechanical Details

● UES500-XXXYYYYSPAZ-OP(PCB Type) Unit: mm

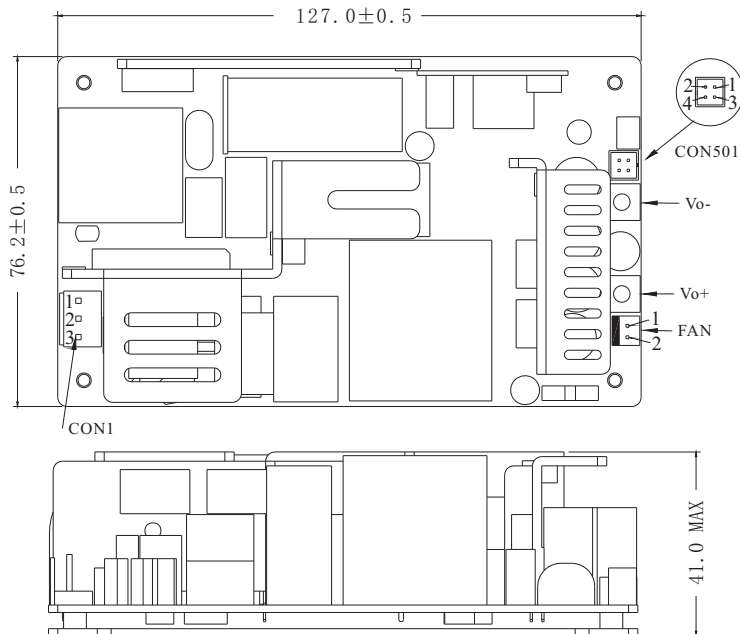

AC Input Connector(CON1):
JST B3P-VH or equivalent

Pin No.	1	2	3
Assignment	AC/N	No Pin	AC/L

DC Output Connector(Vo+,Vo-):

Pin No.	Vo+	Vo-
Assignment	V+	V-

Function Connector(CON501):
TKP DH2L-2X2 or equivalent


Pin No.	1	2	3	4
Assignment	RS-	RS+	GND	PG

Function Connector(CON500):
TKP DH2L-2X2 or equivalent


Pin No.	1	2,4	3
Assignment	+5Vsb	GND	PS-ON

FAN Connector(FAN):
TKP 8812-2 or equivalent

Pin No.	1	2
Assignment	FAN-	FAN+

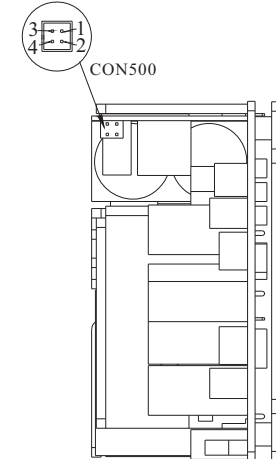


● UES500-XXXYYYYSPAZ-OPC(Enclosed type with external separate fan)

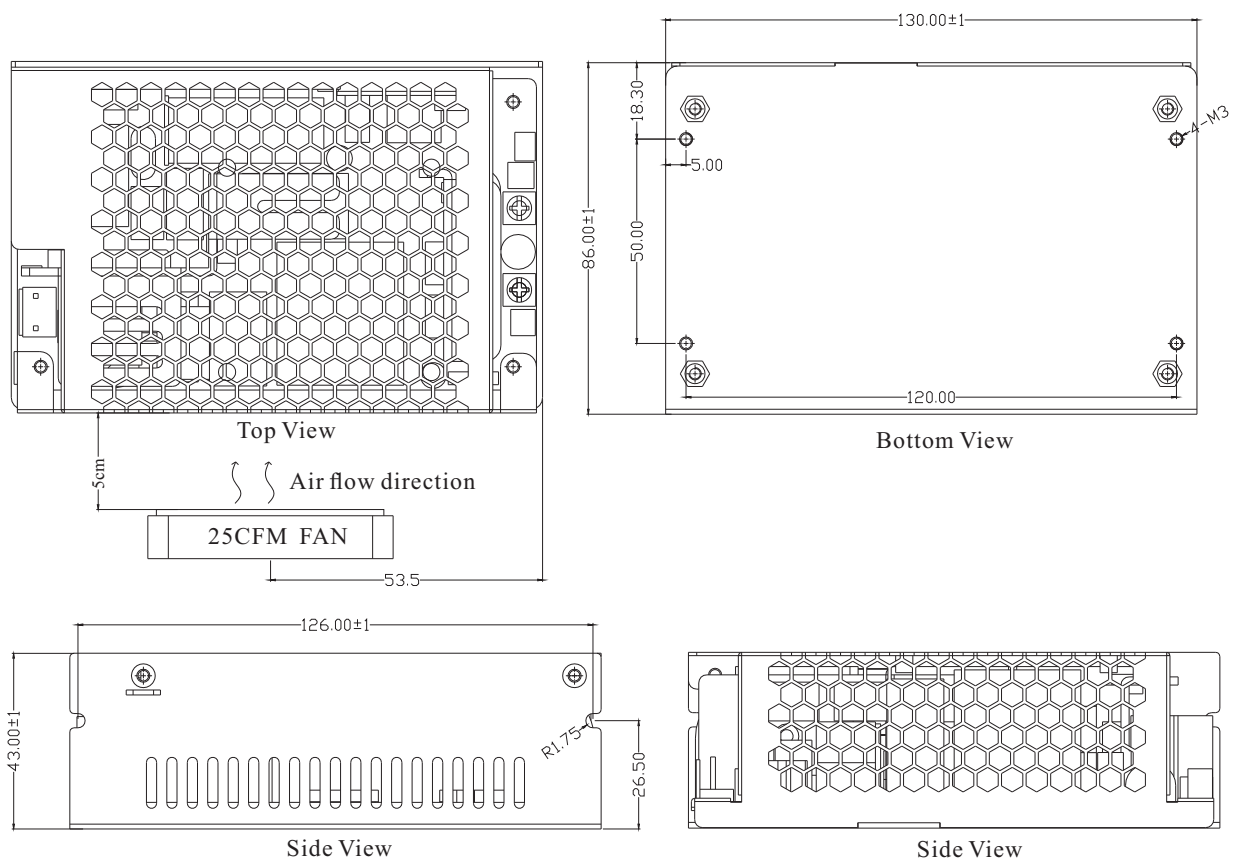

Mechanical Details

● UES500-XXXYYYYSPA-Z-OPTF(Enclosed type with fan on the top) Unit: mm

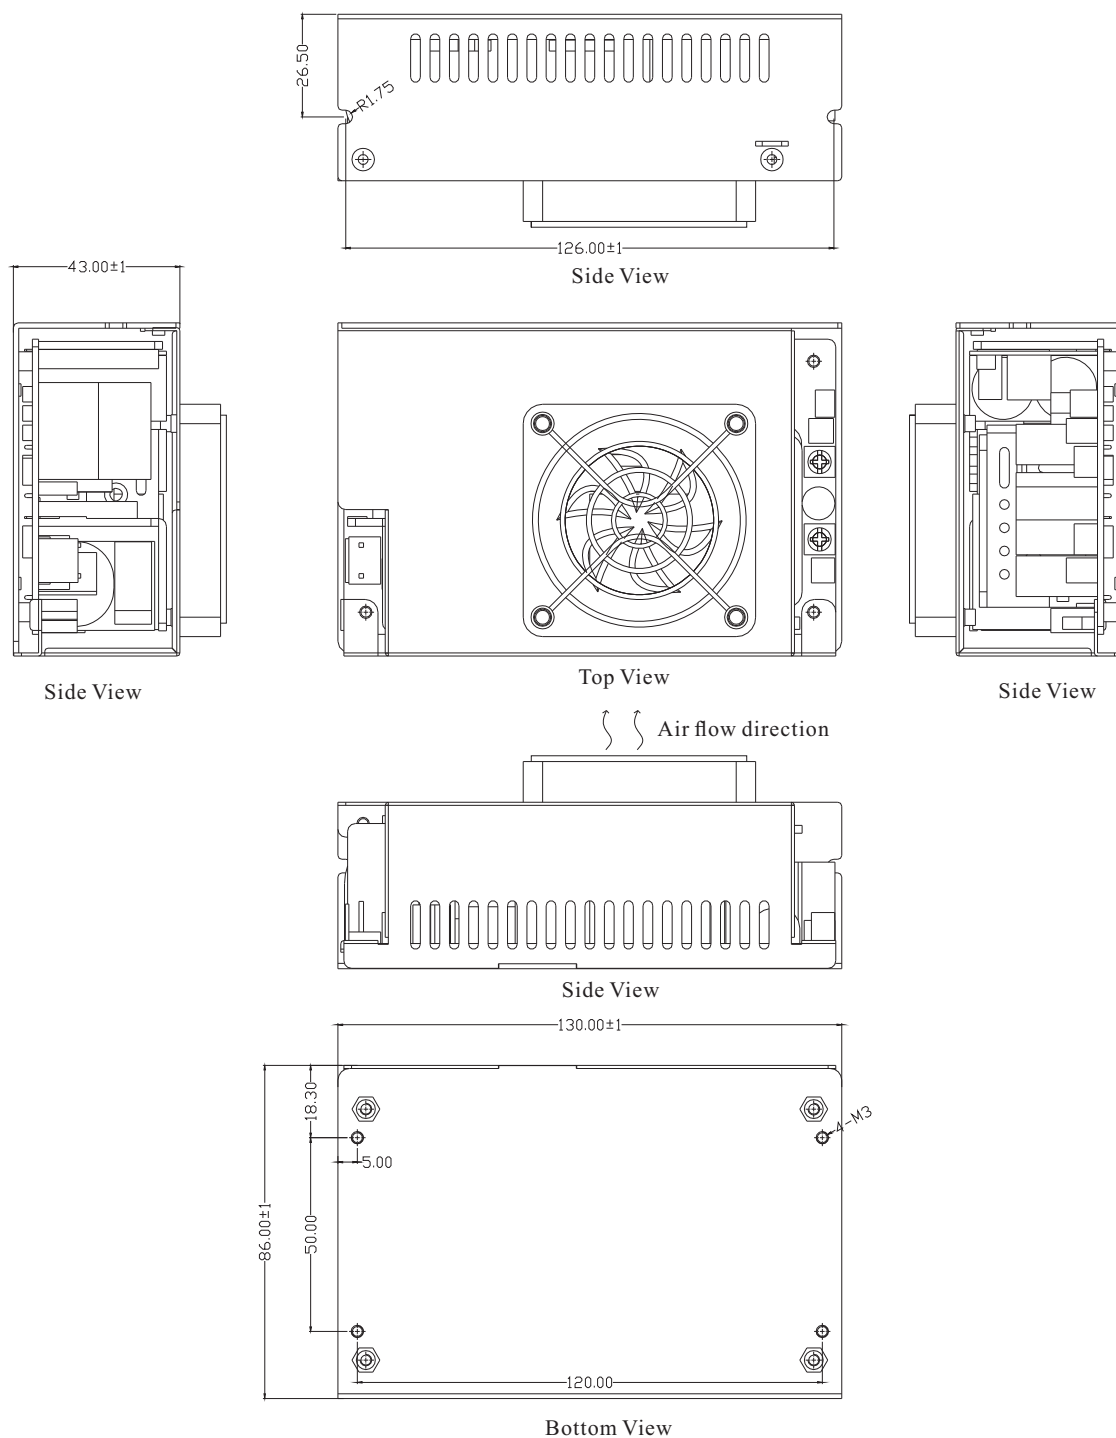

Mechanical Details

● UES500-XXXYYYYSPAZ-OPSF (Enclosed type with fan on the side) Unit: mm

